



vitapur®

CLASSIC SERIES
SÉRIE CLASSIQUE
SERIE CLÁSICA

Water Dispenser

Distributeur d'eau

Dosificador de agua

Use & Care Guide

Guide d'utilisation et d'entretien

Manual d uso y cuidado

CAUTION: Before using water dispenser, read this manual and follow all safety rules and operating instructions.

MISE EN GARDE: Avant d'employer votre distributeur d'eau, lisez ce manuel et suivez toutes les règles de sécurité et les consignes d'utilisation.

PRECAUCIÓN: Antes de usar el dosificador de agua, lea este manual y siga todas las reglas de seguridad e instrucciones de funcionamiento.



VWD5206W





Thank you for purchasing a vitapur® Water Dispenser.

 
Please read the enclosed operating instructions carefully and retain this booklet for future reference.

We have carefully engineered your vitapur® Water Dispenser to give you years of enjoyment and trouble free operation.

IMPORTANT SAFEGUARDS


- **Never turn the dispenser upside down or tilt more than 45 degrees. If the unit has been resting on its' side for an extended period of time, place the water dispenser in the upright position for approximately 12 hours before turning it on.**
- For use with 3 or 5 gallon (12 or 19 liter) water bottles and most water filtration systems, (not included).
- Never use this dispenser with water that is unsafe to drink or is from an unknown source.
- Never use any other liquid in the dispenser other than known and microbiologically safe bottled water.
- This water dispenser is equipped with a grounded power cord plug for your safety. It must be plugged into a grounded outlet. Do not use an extension cord with your water dispenser.
- Keep your water dispenser in a dry place away from direct sunlight.
- Never put anything flammable close to the dispenser.
- Leave a minimum of 2" (5 cm) around the back and sides of the dispenser for proper ventilation.
- Always install your water dispenser on a level floor. Wait 3 minutes before restarting the machine after shutting it down.
- Always unplug the water dispenser before servicing or cleaning it.
- Regular cleaning of your water dispenser is required for your warranty. Please follow the cleaning instructions outlined in this manual and clean the dispenser every 4 months.

To avoid water overflow when cleaning your dispenser, always remove the bottle support collar before pouring water or cleaning solution into the reservoir.

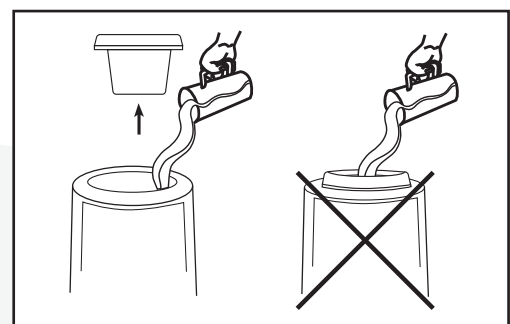

YOUR VITAPUR® WATER DISPENSER

 1. Bottle support collar
2. Room temperature water dispensing tap
3. Cold water dispensing tap
4. Removable drip tray
5. Adjustable COLD water thermostat (rear of dispenser)
6. Condenser coils (rear of dispenser)
7. Power switch (rear of dispenser)

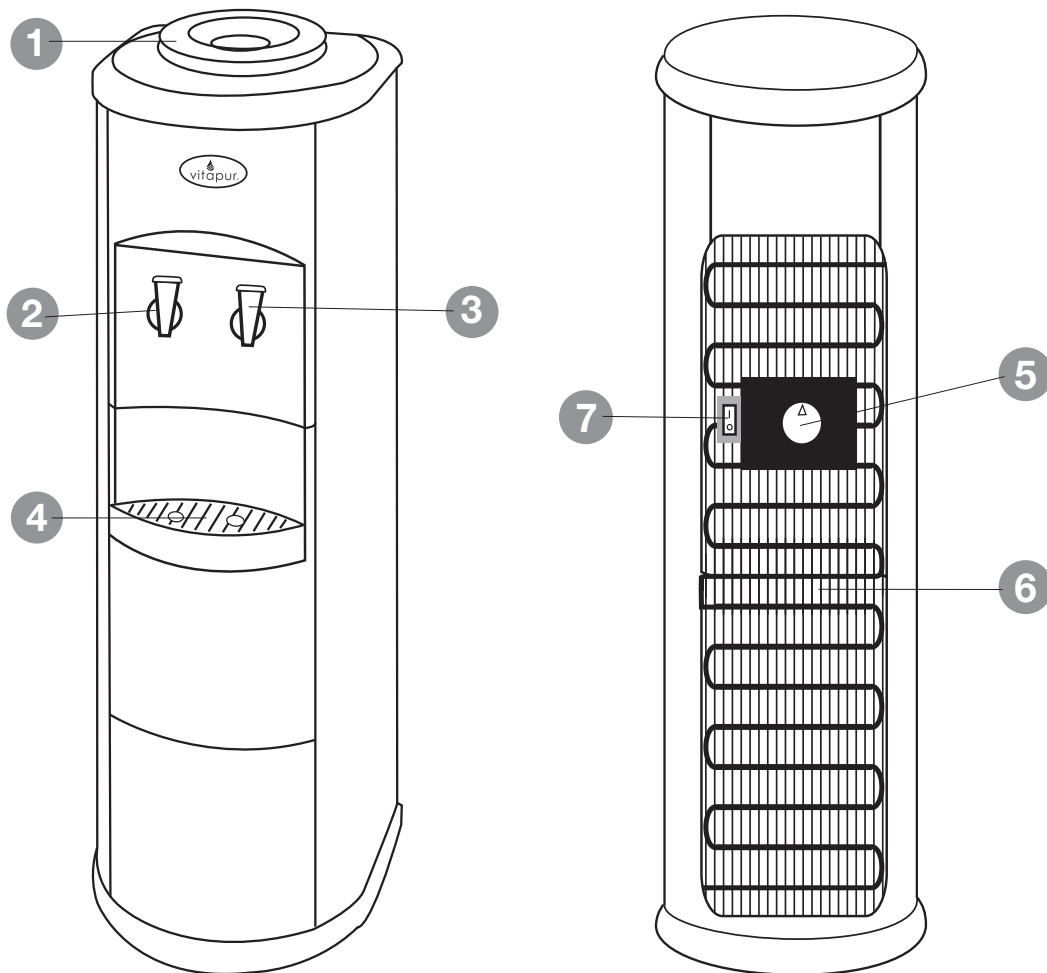

OPERATING INSTRUCTIONS

 
Initial Product Cleaning Procedure

As with most new appliances, it is recommended to clean the reservoir prior to first time use.

1. Make sure the unit is unplugged and the power switch is turned off.
2. **Remove the bottle support collar**, saturate a clean cloth with water dispenser cleaner or vinegar and wipe the inside of the reservoir.
3. Pour water dispenser cleaner or a mixture of 0.3 gal / 1 L of vinegar with 0.3 gal / 1 L of hot water into the reservoir and wait 20 minutes.

IMPORTANT: To avoid water overflow while cleaning the dispenser, always remove the bottle support collar before pouring water or cleaning solution into the reservoir. **(See Figure A).**

4. Press both dispensing taps until water no longer comes out.
5. Rinse again with clean water.
6. Place bottle support collar back on top of dispenser.

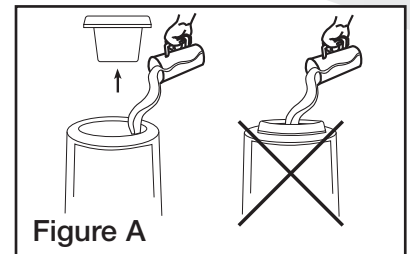

Maintaining Your Water Dispenser

Like most appliances, your new water dispenser requires regular cleaning to operate efficiently. **Your water dispenser must be cleaned every 4 months (see procedure on page 5).**

Installing the Water Bottle

IMPORTANT: Always wash your hands first! Clean the top (neck) of the bottle with a clean cloth and do not touch the part of the unit that the water touches. Make sure the unit is unplugged and power switch is in the OFF position. The water bottle can be purchased from your local retailer.

1. Remove the protective cap from the end of the water bottle unless the bottle has a puncturable cap or sticker.
2. Lift and turn the bottle upside down, placing it securely on the bottle support collar.
3. Press and hold both dispenser taps until water flows from the dispenser. Drain about 0.3 gal / 1 L of water before initial use. This does not need to be repeated with replacement bottles.
4. Plug in the water dispenser.
5. Set the power switch at the rear of the dispenser to the ON position **(see item 7 on page 2).**

 
 
IMPORTANT NOTICE ABOUT LEAKING BOTTLES

If you find that your dispenser is leaking, check the water bottle first!

Almost all 3 and 5 gallon water bottles are recycled and handled extensively during cleaning, filling, and shipping. As a result they are very prone to developing pin holes or small cracks that can cause an overflow (or leak) when placed on top of a water dispenser.

Most often, there is nothing wrong with your water dispenser. If you are experiencing a leak, this simple test will allow you to determine whether your water bottle or dispenser is the source of the problem.

1. Unplug the unit, turn off the power switch and remove the water bottle.
2. a) Remove the bottle support collar and check the water level inside the reservoir – it should be at roughly three-quarters full.
b) Please add or drain a few glasses of water to achieve the required fill level.
3. Let the water sit for approximately 2 hours. If the dispenser does not leak, it is the bottle that is leaking due to a small crack or pinhole. Please contact your water supplier for a replacement bottle.

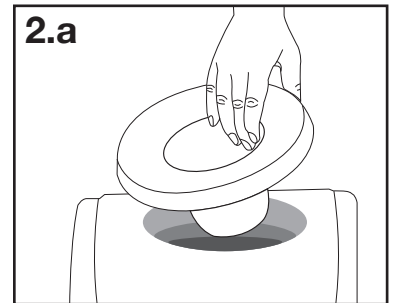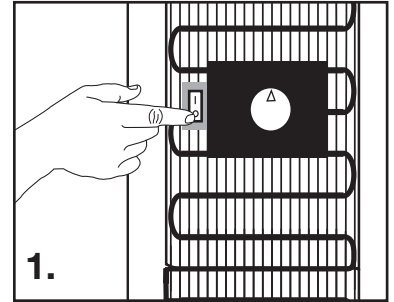

Please visit us at www.greenwayhp.com for water dispenser accessories and helpful use and care tips.

 
Dispensing Room and Cold Water

Place a glass under the appropriate tap. For cold water, press the blue tap downward until the desired amount of water is dispensed. To dispense room temperature water, press the white tap downward until the desired amount of water is dispensed.

Adjusting the Temperature (Cold water only)

By turning the thermostat at the back of the unit, the temperature can be adjusted. Turn the dial clockwise between the min (cool) and max (colder) levels until the desired temperature is reached.

If the water dispenser is not dispensing water, there could be a possible ice build up due to the thermostat being set too cold. If this happens, unplug the dispenser overnight and then reset. Set thermostat to MIN, slowly increasing based on your use and need for cold water.

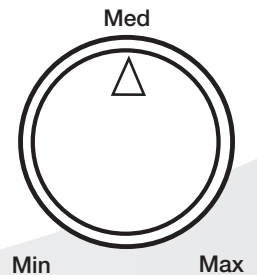

CLEANING AND MAINTENANCE

Like most appliances, your new water dispenser requires periodic maintenance to operate efficiently. Your water dispenser must be cleaned every 4 months. Failure to maintain your dispenser will void your warranty.

Cleaning Your Water Dispenser

IMPORTANT: Make sure you turn the power switch to the OFF position and unplug the dispenser before performing any of the following cleaning procedures.

Cleaning the Outside of the Water Dispenser

 
The outside of the dispenser can be wiped clean with a water dispenser cleaning solution or a mild soap and water mixture. Never use harsh chemicals or abrasive cleaners. Rinse thoroughly with clean water and then dry surfaces.

Cleaning the Drip Tray

To remove, take the grill off the drip tray and firmly lift the tray up, dislodging it from the dispenser. Drain and clean.


The drip tray should be emptied and cleaned regularly to remove spotting and any mineral deposits. Clean with water dispenser cleaning solution or a mild soap and water mixture. For tough deposits, add vinegar and let it soak until the deposits come loose. Then wash, rinse and dry thoroughly.

To replace, put the grill back on the tray and slide the tray onto the guides.

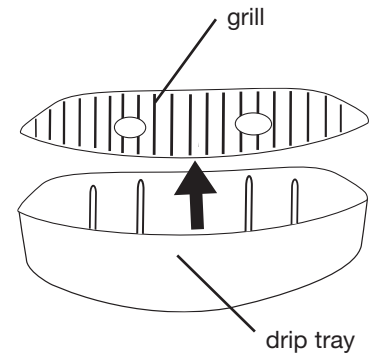

Cleaning the Condenser

 Vacuum or sweep away the dust from the condenser coils at the back of the dispenser. For best results, you can purchase a brush designed specifically for this purpose from your local appliance store. This will improve cooling and efficiency of your unit.

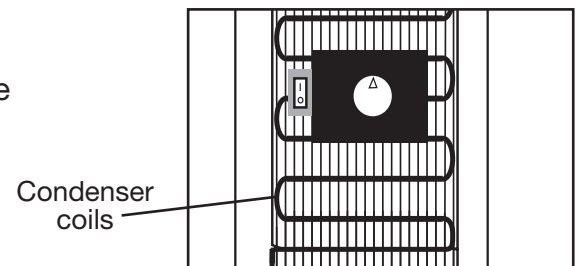

Draining the Reservoir

Drain the reservoir

- Before and after cleaning your unit.
- When going on long vacations.
- If you are not using the dispenser for long periods of time.

IMPORTANT! Turn power switch to the OFF position and unplug the dispenser before performing this procedure.

1. Remove the water bottle.
2. Press both dispensing taps until water no longer comes out.
IMPORTANT: Collect the water in a container, not the drip tray.
3. Replace the water bottle. (**See *Installing the Water Bottle***).

Cleaning the Inside of the Dispenser

To prevent mineral deposits that can affect the taste and flow of the water and to ensure proper product performance, your water dispenser must be cleaned every 4 months.

1. Make sure the power switch is in the OFF position.
2. Remove the water bottle and **bottle support collar**.
3. Drain the reservoir. **(See *Draining the Reservoir*).**
4. Pour water dispenser cleaner or a mixture 0.3 gal / 1 L of vinegar with 0.3 gal / 1 L of hot water into the reservoir and wait 20 minutes. If using a water dispenser cleaning solution, please follow the manufacturer's instructions.

IMPORTANT: To avoid water overflow while cleaning the dispenser, always remove the bottle support collar before pouring water or cleaning solution into the reservoir. **(See *Figure A, page 3*).**

5. Press both dispensing taps until water no longer comes out.

IMPORTANT: Collect the water into a container, not the drip tray.

6. Rinse with clean water.

7. Replace the bottle support collar and the water bottle. **(See *Installing the Water Bottle*).**

IMPORTANT: Drain approximately 4 glasses of water from each tap before initial use.

This does not need to be done with replacement bottles.



Going Away on Vacation

When not using the dispenser for long periods of time or when going on vacation, conserve energy by setting power switch to the OFF position, unplug the dispenser and drain the reservoir.

(See *Draining the Reservoir*). Follow ***Initial Product Cleaning Procedures*** upon return and startup of the dispenser.

SPECIFICATIONS

VWD5206W

Output per hr:	Cold	0.5 gal / 2.0 L
Internal Tank:	Cold	0.8 gal / 3.2 L
Cooling Temp (approx.):		46°F / 8°C
Power Consumption:	Cold	90 W



TROUBLESHOOTING TIPS

Problem	Possible Cause	Suggested Solution
Water dispenser or dispensing tap is leaking	Small pin hole or crack in the bottle. (common with recycled water bottles)	Conduct water bottle leak test outlined on page 4.
	Water was poured directly into bottle support collar and overflowed.	Drain by pressing dispenser taps.
	Possible air pocket.	Press both taps several times to relieve air pocket and release to re-set valve.
Water is not cold enough	All the water in the tank has been used.	Replace with full bottle and wait 30 minutes for the water to cool.
	The unit is unplugged.	Plug it into the outlet.
	The circuit breaker in your home is tripped or the fuse has blown.	Reset the breaker or replace the fuse in your home.
	Power switch not turned on at back of unit.	Turn the switch to the ON position.
	Temperature limit tripped.	Set power switch to OFF position, wait 5 minutes, then set power switch to the ON position. Wait 30 minutes for the water to cool.
	Thermostat needs to be adjusted colder.	Adjust thermostat between min (cool) and max (colder) levels to achieve desired temperature.
Water dispenser is not dispensing water	Empty water bottle.	Replace with full bottle.
	Mineral deposits clogging tank.	See <i>Cleaning the Inside of the Dispenser.</i> (pg 6)
	Possible air pocket.	Push down on the dispenser taps to prime the unit.
	Possible ice build up due to thermostat set too cold.	Unplug overnight, then reset. Set thermostat to MIN, slowly increasing based on your use and need for cold water.
Water dispenser is noisy	Bottle making a gurgling noise as it fills the tank.	This is normal.
	Water dispenser is uneven.	Make sure the dispenser is on an even surface that can support its full weight.

ATTENTION: Do not return this product to the store. For questions on operation, assembly or parts, please contact us at www.greenwayhp.com or **1-866-253-0447**.

FREQUENTLY ASKED QUESTIONS

Q: Why is my water dispenser leaking?

A: If you are experiencing a leak with your water dispenser please do the following to see if the water bottle or the dispenser is leaking.

1. Unplug the unit, turn off the power switch and remove the bottle.
2. Remove the bottle support collar and check the water level inside the reservoir – it should be at roughly three-quarters full.
3. Let water sit for 2 hours. If the dispenser does not leak, it is the bottle that is leaking due to a small crack or pinhole and it needs to be replaced. If the dispenser is leaking, please contact Greenway Home Products at support@greenwayhp.com or **1-866-253-0447**.

Q: Why do I get a plastic taste from my dispenser?

A: As with most new appliances such as coffee makers and kettles, there is often a plastic taste upon initial start-up of the unit. To remove this taste, simply follow the cleaning instructions outlined in ***Cleaning the Inside of the Dispenser (pg 6)***.

Q: What is the spike that goes into the bottle?

A: Vitapur® water dispensers feature a “piercing valve” as part of the bottle support collar, providing added convenience for water bottle installation. Depending on the water bottle supplier, a small opening may or may not be present in the bottle cap for this specific purpose. If the piercing valve opening is not present, the entire bottle cap must then be removed to eliminate possible damage to the piercing valve. If the opening is present, remove the protective seal prior to installing the bottle.